



Installation

1. Thread wire through housing.
2. Strip insulation per strip gauge.
3. Crimp fuse clip to wire.
4. Pull wire and seat fuse clip in housing.
5. Insert fuse.
6. Snap housing together.