





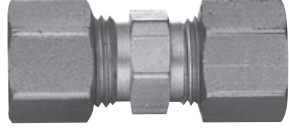

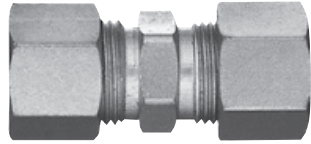

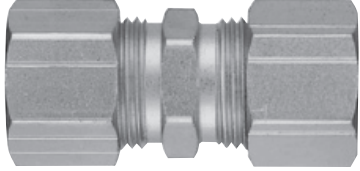























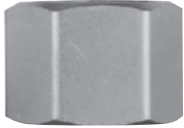
 <b>5018</b>  <b>1/8 Union</b>	 <b>5019</b>  <b>3/16 Union</b>	 <b>5020</b>  <b>1/4 Union</b>	 <b>5021</b>  <b>5/16 Union</b>	 <b>5022</b>  <b>3/8 Union</b>	 <b>5024</b>  <b>1/2 Union</b>
 <b>5000</b>  <b>1/8 Sleeve</b>	 <b>5001</b>  <b>3/16 Sleeve</b>	 <b>5002</b>  <b>1/4 Sleeve</b>	 <b>5003</b>  <b>5/16 Sleeve</b>	 <b>5004</b>  <b>3/8 Sleeve</b>	 <b>5006</b>  <b>1/2 Sleeve</b>
 <b>5009</b>  <b>1/8 Nut</b>	 <b>5010</b>  <b>3/16 Nut</b>	 <b>5011</b>  <b>1/4 Nut</b>	 <b>5012</b>  <b>5/16 Nut</b>	 <b>5013</b>  <b>3/8 Nut</b>	 <b>5015</b>  <b>1/2 Nut</b>